




HD DVR Converter Box User Manual

Model: HDTV-2100V

Content

Packing.....	1
Safety warning.....	2-3
Overview of the equipment.....	4-7
1. Front panel.....	4
2. Rear panel.....	4
3. Remote control unit.....	5-7
INFO key.....	6
AUDIO key.....	6
CC key.....	6
PREV/NEXT & F.R./F.F key.....	6
EPG key.....	7
LIST key.....	7
FAV key.....	7
Cable connections.....	8
Menu operation.....	9-24
1. Program.....	9-11
2. Picture.....	11
3. Channel search.....	12-15
4. Time setting.....	16
5. Option.....	17-18
6. System setup.....	18-21
7. USB.....	22-23
Music.....	23
Photo.....	23
Movie.....	23
PVR Function	24
Play your recorded programs (USB Key Function)	24
Appendix.....	25-26
1. Troubleshooting.....	25
2. Specifications.....	26

Packing

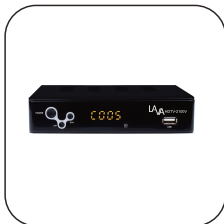


Converter Box



Remote Control



Battery

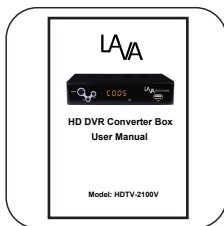

User Manual



A/V Cable

Safety Warning

FCC Notice

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rule. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. This is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off or on, the user is encouraged to try to correct the interference by one or more of the follow measures:

- Reorient or relocate the receiving antenna
 - Increase the separation between the equipment and receiver
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
 - Consult the dealer or an experienced radio/TV technician for help
-

Important Safety Instructions



To reduce the risk of electric shock.

Do not remove cover.

No user-serviceable parts inside. Refer servicing to qualified service personnel.



This symbol indicates "dangerous voltage" inside the product that presents a risk of electric shock or personal injury.



This symbol indicates important instructions accompanying the product.

1. Read, follow and keep these instructions.
2. Do not use this apparatus near water.
3. Clean only with a damp cloth. Please unplug power prior to cleaning.
4. Do not block any of the ventilation openings. Install in accordance with the manufacturer's instructions.
5. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
6. Protect the power cord from being walked on or pinched particularly at the plug, receptacles, and the point where they exit from the apparatus.
7. Only use attachments/accessories included within this package.
8. Unplug this apparatus during lightning storms or when unused for long periods of time.
9. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way; such as when the power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

A Class II APPARATUS shall be permanently marked with the words "DOUBLE INSULATION" or "Double Insulated" and "When servicing use only identical replacement parts."

WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

Safety Warning

Precautions

Please read these precautions before operating this unit.

1.Power cord protection

To avoid any malfunctions of the unit, and to protect against electric shock, fire or personal injury, please observe the following.

- Hold the plug firmly when connecting or disconnecting the AC power cord.
- Keep the AC power cord away from heating appliances.
- Never put any heavy object on the AC power cord.
- Do not attempt to repair the AC power cord in any way.
- Never make or change connections with the power switched on.

2.Placement

Avoid placing the unit in areas of:

- Direct sunlight or heating radiators
- High temperature (over 35℃) or high humidity (over 90%)
- Dust as the internal parts may be seriously damaged.

3.Non-use periods

When the unit is not being used, turn it off. When left unused for a long period of time, the unit should be unplugged from the power source.

4.No fingers or other objects inside


- Touching internal parts of this unit is dangerous, and may cause serious damage to the unit. Do not attempt to disassemble the unit.
- Do not put any foreign object in this unit.

5.Keep away from water

- Keep the unit away from flower vases, tubs, sinks, etc. if liquids are spilled into the unit, serious damage could occur.


Overview Of The Equipment

1. Front Panel

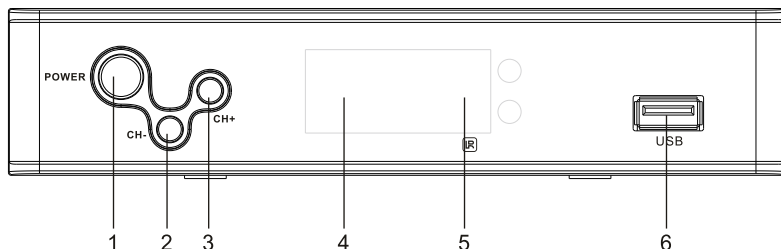

- 1.Power on/off button
- 2.Change channel down button
- 3.Change channel up button
- 4.LED display window
- 5.Remote control signal sensor
- 6.USB jack

2. Rear Panel

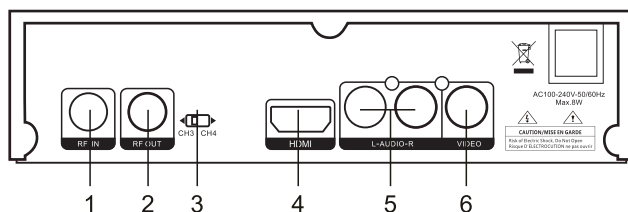

1. **RF IN**: Connect to terrestrial antenna.
2. **RF OUT**: CH 3/4 NTSC RF output
3. **CH3/CH4**: CH3/4 switch button
4. **HDMI** HDMI output
5. **L – AUDIO – R** Connects these terminals to analog audio inputs of a TV set. Or connect these terminals to the L/R inputs of a separate audio component.
6. **VIDEO** If your TV or monitor has composite Audio/Video cable, connect this jack to the AV input jack on your TV or monitor using an Audio/Video cable

Overview Of The Equipment

3. Remote Control Unit




The remote key list:

- **STANDBY:** Press to turn on or standby
- **HDMI:** Adjust resolution
- **MUTE:** Press to mute the sound of TV audio, press again will restore the sound
- **0 – 9:** Press to enter the required numbers in the input box or select a channel to watch
Press directly to tune a particular channel.
- **REC:** Press to start recording
- **STOP:** Press to stop playback or recording
- **MENU:** Press to display the Main Menu on the screen
- **EXIT:** Press to return to the previous menu
- **▲/▼/CH+/-:** Move cursor up/down; Channel + / -
- **◀/▶/VOL+/-:** Move cursor left/right; Volume + / -
- **OK:** Confirm
- **(LIST)** Press to display all TV channels or all Radio channels
- **◀◀/▶▶:** Prev / Next
- **◀◀/▶▶ :** Rev / Fwd
- **FAV:** Press to display the favorite channel's list for setting
- **EPG:** Electronic Program Guide
- **—:** Press to input a dash in a virtual channel number
- **CC:** Press to turn on/off closed captioning
- **INFO:** Show/Hide service info:
Press once a Service Info Bar will appear
Press again to show Detail Info
Press again to show Program Info
- **PLAY:** Press to resume playback
- **PAUSE:** Press to pause playback or recording
- **RECALL:** Press to switch between current & last TV channel
- **HOLD:** This is a Control Key under USB/Video and PVR mode
- **REPEAT:** Press this button to repeat the current options
- **USB:** Press to view content of connected external HDD or Flash drive
- **TIMER:** Press to go to Programmed Time Recording setup
- **AUDIO:** Switch Audio channel
- **PVR LIST:** Personal video recording list

Overview Of The Equipment


INFO. key

Press "INFO" key to display the Information banner while viewing TV programs.
Information banner:

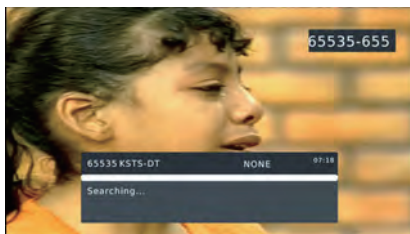

AUDIO key

Some programs may have multilingual audio language and this audio broadcast may be on a different audio mode such as Stereo, Left or Right. All the available audio languages will be displayed on the audio track window when you press the L/R key. The screenshot illustrates this below. If there is no audio output after you have selected the audio language, it indicates that there is no audio on the current audio mode, so you have to select the previous audio mode.

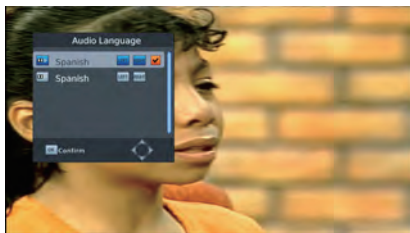

CC key

Certain programs have multilingual subtitle information. All available subtitle languages will be displayed in the subtitle information window when you press the **CC** key. The screenshot illustrates this below. Follow the help information in the subtitle window to select preferred subtitle.



◀◀ & ▶▶ (PREV / NEXT) key & ⏮ & ⏭ (F.R. / F.F) key

The PREV/NEXT key and F.R./F.F. key can be used during playback of multimedia programs from your external USB device. Press the PREV/NEXT key to go to the previous/next program and F.R./F.F. key to fast forward or rewind during playback.

Overview Of The Equipment

EPG key


Press EPG key to display the on screen electronic program guide.

This displays a 7 days Electronic Program Guide for all programs being broadcast from all available broadcasters.



OK/(LIST) key

Press OK key to display all TV channels or all Radio channels. Follow the help information at the bottom of the window to select preferred channel.

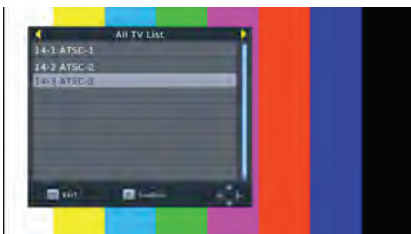

FAV key

Setting up Favorite TV or Radio Channels:

You can add preferred channels to a favourite's channel list. Press the Menu key to access the Program Edit Menu. The Favourite channel option allows you to classify the channels by different genre: Movies/News/Sports/Music. Press the "FAV" or "OK" key to confirm your selection. A heart shaped symbol will appear next to that channel which confirms your selection.




Disable Favourite TV or Radio Channel:

Press the Menu key to access the Program Edit Menu. The list of the favourite channels will be displayed. Highlight the desired channel to be disabled. Press "FAV" button, select the "Disable" option and press the "FAV" or "OK" key to cancel. Press the "Exit" key to exit the menu.

Cable Connections

Make sure the STB is connected properly as below:

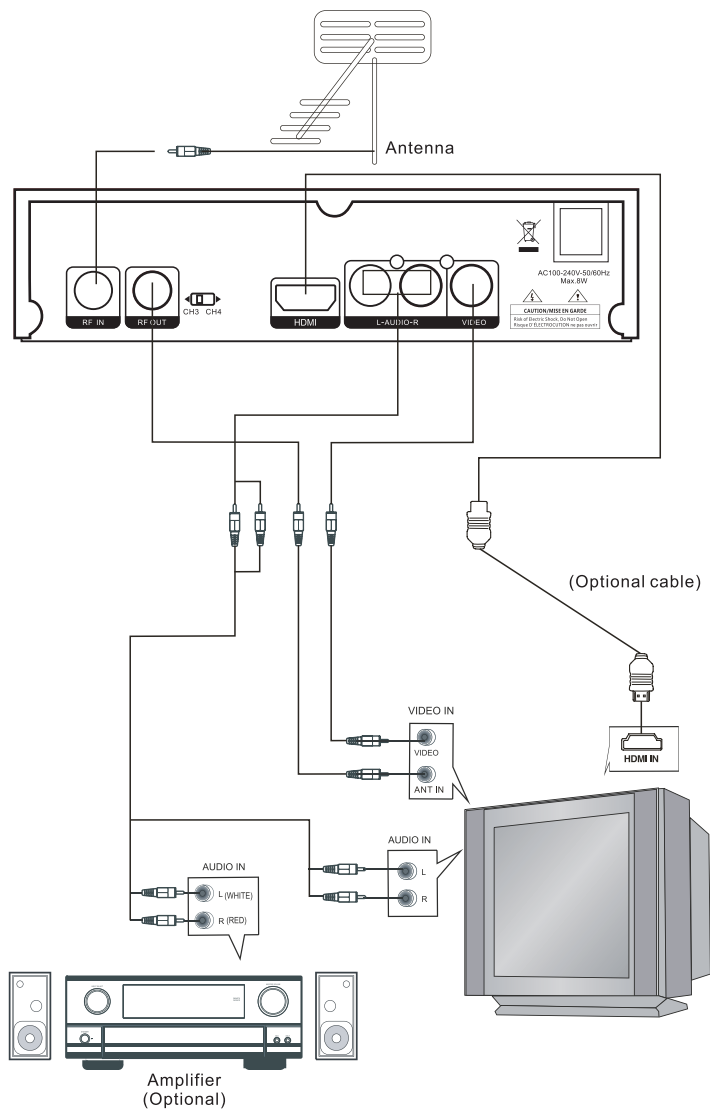

Menu Operation

Press MENU key to display the main menu. It consists of 7 items as following:

- Program
- Picture
- Channel Search
- Time Setting
- Option
- System
- USB

Note: In any page of the menu, you can use EXIT key to return to previous menu page, or press MENU key switch to Main Menu page and then press MENU key again to exit Main Menu.

Program

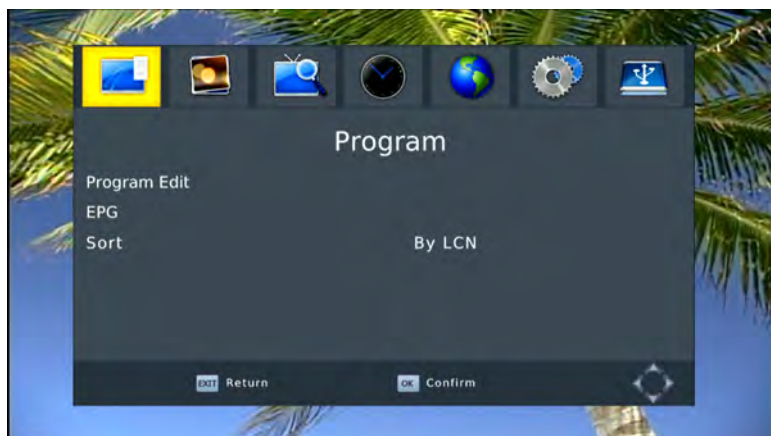


Figure 1

Menu Operation

Press ▼ key first, then press ► key, enter into Program setting menu. (password: 000000)



Figure 2



Figure 3

Menu Operation

1. Choose the menu as per request (Move/Skip/Lock/Delete/FAV/Rename).

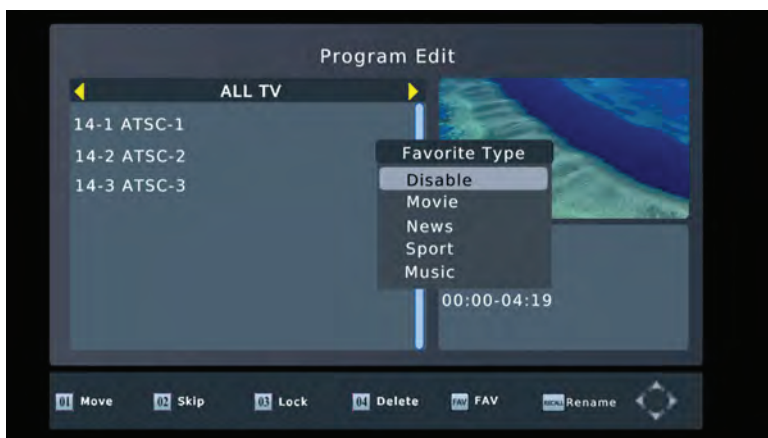


Figure 4

Picture



Figure 5

Aspect Ratio: AUTO, 16:9 Pillar Box, 16:9 Pan & Scan, 4:3 Letter Box, 4:3 Pan & Scan,
4:3 Full, 16:9 Wide Screen
Resolution: 480i, 480p, 720p, 1080i & 1080p (60Hz)
TV Format: NTSC / PAL

Menu Operation

Channel Search



Figure 6

1. Auto Search 2. Manual Search 3. Country

Use ▲ & ▼ keys to move up and down from one item to another, and press ► key to display corresponding sub-menu.

Auto Search

In the Main menu, use ▲ & ▼ keys to select Auto Search item, and press ► key to enter into Auto Search menu.



Figure 7

Menu Operation

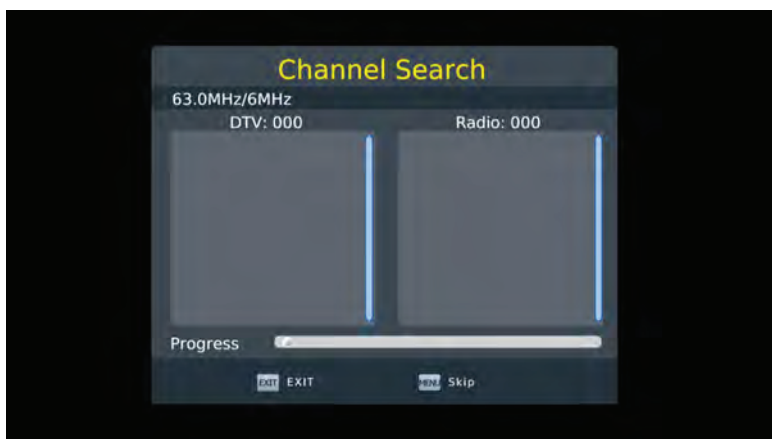


Figure 8

Manual Search

In the Main menu, use ▲ & ▼ keys to select Auto Search item, and press ► key to enter into Manual Search menu.



Figure 9

Menu Operation

1. You can press the number keys into channel, or press directional keys to choose.
2. Suggestion using auto channel search
3. Press EXIT to quit

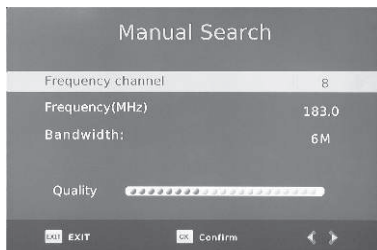


Figure 10

Country

In the Main menu, use ▲ & ▼ keys to select Auto Search item, and press ► key to enter into Country menu to select different countries.



Figure 11

RF Output

The system can output channel 3 or channel 4 NTSC RF signal as following:



1. Use a cable to connect "RF OUT" converter of the STB and your TV can support CATV input.
2. Auto search the program and change current channel to CH3 or CH4 directly by inputting the channel number in your TV.



Figure 12

Loop through output setting

The system can select the loop through as following:

1. Use a cable to connect "RF OUT" converter of the STB and your TV can support CATV input
 2. Go to the Setup Menu and ON/OFF the loop through RF output
 3. Auto search the program to the target channels. (when searching programs, please use TV Remote)
- Note: When under the setting of LOOP THROUGH, the machine will not play the TV program.

Menu Operation

Time Setting

Time Zone: select Time and Timezone.

Sleep: press ► key to select the Sleep Time (1~12hours).

Power ON/OFF: press ► key into the setting menu, select Power ON Time or Power OFF Time.



Figure 13



Figure 14

Menu Operation

Option



Figure 15

OSD Language: English, Spanish, French

Close Caption



Figure 16

Menu Operation

Close Caption

CC option list:

CC Display	CC OFF, CC1, CC2, CC3, CC4, CC5, CC6
CC Position	Auto, Top, Bottom
Front Size	Default, Small, Medium, Large
Front Color	Default, White, Black, Red, Green, Blue, Yellow, Magenta, Cyan
BG Color	Default, White, Black, Red, Green, Blue, Yellow, Magenta, Cyan
CC Transparency	Default, Solid Transparent, Transparent

Menu Operation

System Setup

In main menu, select System Setup item and press **OK** key to enter into System Setup menu. Press **▲** & **▼** to select item and **▶** key to enter into sub menu or change current item setting.

1. **Parental Guidance:** Press **▶** key when this item is highlighted, input password.



Figure 17

Menu Operation

Password: 000000



Figure 18

Select Rating Region:



Figure 19

Menu Operation

2. **Set Password:** Press ► key when this item is highlighted.
-> Input old password (Default 000000)
-> Input new password



Figure 20

3. **Restore Factory Default:** Restore system setting parameter to default setting if you press ► key when this item is highlighted.
* Default password is 000000



Figure 21

4. **Information:** Restore system setting parameter to default setting if you press ► key when this item is highlighted.

Menu Operation

5. **Software Update:** Insert USB disk while the unit on, choose the upgrade file, press the right directional key to upgrade, make the sure the unit stays on while the upgrade is processing.

* If firmware update is needed, we will upload the most update firmware & instruction on our website: www.mediasonic.ca



Figure 22

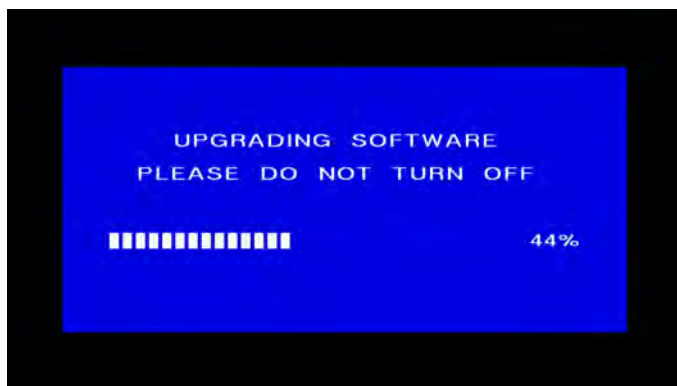


Figure 23

Menu Operation

USB

Multimedia

MENU=>Multimedia You can now select to view Photos, play MP3 music files and view Movie files via the multimedia player. Known supported files are outlined below.
NTFS, FAT32 and FAT16 file systems are supported.

Player	Supported file
Photo	JPEG, BMP, PNG
Music	*.wma, *.mp3, *.aac
Movie	*.avi, *.mpg, *.dat, *.vob, *.mkv, *.mjpeg



Figure 24

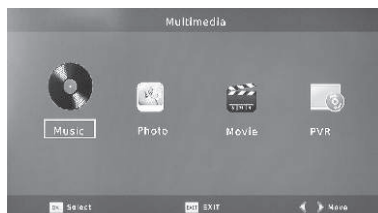


Figure 25

Music: You can choose your favorite songs, fast forward & fast rewind, stop and play, go to, REPEAT.

Photo: After choose the specific picture from the preview file, you can press the "Enter" key for the full screen. And press "Play" key enter the slide show mode; if you want the slide show go with music, you need to play the music first and then open the picture, then you will go with slide show + music.

Movie: You can choose any movie or song as you like, change last and next, fast forward & fast rewind, play and stop, goto, REPEAT and so on. Press the "PLAY" key enter the full screen status.

PVR: Depends on user's choose, there are some functions like remove/edit/delete and so on. Play/stop/last/next/fast forward/fast rewind/repeat all these functions can be done with the remote, just according to what the user's request. If you press the remote's "HOLD" key, you will enter the "Full Screen" status.

Menu Operation

PVR

PVR Configure

Choose record device, partition.



Figure 26



Figure 27

Photo Configure

Here you can choose slide time, mode and aspect ratio (See figure 28)



Figure 28

Menu Operation

PVR Function

The PVR function allows you to record and replay your favorite programs.

There are two ways to record your TV programs: **Instant Recording** and **Timer Schedule recording**.

Before you record a program, you will need to connect an USB flash drive or external hard drive to the converter box first. The maximum capacity of HDD you can connect is up to 2TB. (USB flash drive and external hard drive are sold separately)

Please note that due to buffer speed requirement some USB flash drive may not compatible when used with the Timer function.

1. Instant Recording

Press the **REC key** to start recording the current TV program that you are watching. The recording clock should be displayed on the top left hand side of the screen. Press **info key** to view information of the recording. Press **STOP key** to stop the current recording.

2. Timer Schedule Recording

You will not miss any of your favorite programs with the Timer Schedule Recording feature.

Option 1: On TV mode, press **EPG key** to open the Electronics Program Guide, select the channels and program you wish to record. Press **OK key** to confirm the selection. A schedule Event window will appear on the screen. Select and set the correct parameters to schedule the recording. **Set the mode option to record.** This program will be automatically recorded at the schedule time.

Option 2: Press the **Timer key** on the remote to enter the schedule Event Menu and press number **1 key** to add a recording schedule.

You can edit the set timer recording in the schedule Event Menu by press the number **2 key**. Then edit the channel number, name date, start time and end time. Select the option of Once, Daily, Week recording as desire.

If you need to delete a schedule recording, you can press the number **3 key** in the schedule Event Menu.

Play your recorded programs (USB Key Function)

You can play the program that you record by pressing the **USB key** on the remote. Make sure you connect the USB Flash drive or Hard Drive to the converter box first.

1. Select PVR in the menu, you will see the window open for the USB drive that you connect.
2. Go to **folder HBPVR** and press OK, you will see the list of video that you recorded.
3. Select the video that want to play and press OK. You will see the small preview window on the right hand side.
4. Press **Hold Key** to change to full screen.
5. Press **STOP, PAUSE or EXIT** if you don't want to stop, pause or quit the video.

Appendix

Troubleshooting

If you have difficulty with your digital TV set-top receiver, there are several possibilities you should investigate before calling for a service technician.

Problem	Possible Causes	What To Do
The display on the front panel does not light up	Power cord is not connected	Check that the power cord is plugged into power socket
No sound and no picture	The receiver is under standby	Press POWER key on the front panel to switch to operation mode
No signal when selecting channels	The antenna is disconnected	Check antenna connection
	Program parameters are set incorrectly	Set correct parameters
Picture only ,but no sound	Audio cable is not connected securely	Connect it securely
	System in MUTE mode	Press MUTE key on the RCU to restore volume
	Volume is set to minimum	Increase the volume to suitable level
	Audio setting parameter is wrong	Please go to Audio Setting menu, select proper audio mode and proper audio language
Sound only, but no picture	Video cable is not connected securely	Connect the video cable securely
	The current channel is in radio mode	Normal
Video and audio mismatch or abnormal sound	Audio channel is not set correctly	Select proper Audio channel
Picture is still or mosaic phenomenon	Signal is too weak	Check to make sure that the signal cord has been connected tightly
Remote control unit does not work	RCU is not aimed at the sensor on the front panel	Aim at the sensor on the front panel
	Not enough power in the battery of the remote control	Change battery

CAUTION: If the problems are still unsolved after you're done all of these. Do not disassemble the STB yourself! Please contract the dealer, or a trained personnel for assistance.

Appendix

Specifications

Tuner

Input Connector	IEC 16902, Female
Input Frequency Range	VHF & UHF
Num of RF Inputs	1
Input impedance	75 ohm
RF output Connector	(bypass)IEC 169-2 Male
Loop through	57-803 MHz

Demodulation

Standard	ETSI EN300 744
Guard interval Modes	1/32,1/16,1/8,1/4 Active Symbol duration
FEC Modes Rate	1/2,2/3,3/4,5/6,7/8
Carriers/Constellation	All modes supported including non hierarchical
Channel bandwidth	6 MHz

Video Decoder

Standard	ISO/IEC 13818-2 and ISO/IEC 14496-10
Transport stream	ISO/IEC 13818-1
Video decoding	MPEG-2 SD/HD (<u>MP@ML</u> , <u>MP@L3</u> and <u>HP@L4</u>), MPEG-4 H.264/AVC SD/HD DivX 4,X ~ 5,X JPEG,BMP,PNG, Motion JPEG AVI, VOB, MOV, MKV
Aspect ratio	4:3 16:9

Audio Decoder

Standard	ISO/IEC13818-3 TS101154
Audio decoding	MPEG-1 and MPEG-2 Layer I & II, Dolby Digital Audio, WMA and HE-AAC Digital Audio
Sample rate	32 kHz, 22.1 kHz, 44.1KHz,48 kHz



For Support

LAVA Electronics Inc.

Tel: 1-909-235-6611

E-mail: support@lavasat.com

www.lavasat.com